



CoiNel Technology Solutions LLP

Rapid Lite | Rapid Pro

Windows Driver Installation Guide



Step-by-step setup for Windows systems

Version: 1.0 | Windows Driver

Support: +91 99727 80764

www.coineltech.com

Welcome

Introduction

This guide provides step-by-step instructions to install the Rapid Lite and Rapid Pro printer drivers on a Windows operating system.

Please follow each step carefully to ensure a successful installation.


Prerequisites

- Rapid Lite or Rapid Pro Printer
- USB cable (Type-A to Type-B)
- Windows 10 / Windows 11
- Administrator access

Installation Steps

1. Launch the Installer



- Locate the driver installer file
- Double-click to start the installation

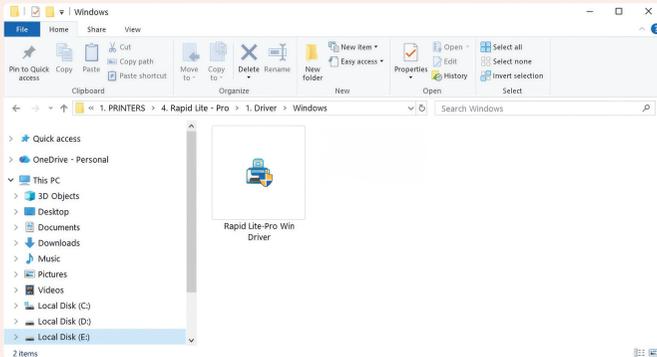

2. Windows Security Warning

If Windows displays “Windows protected your PC”:


- Click **More info**
- Click **Run anyway**

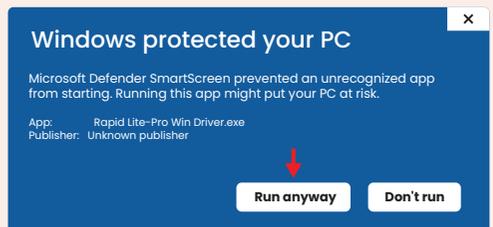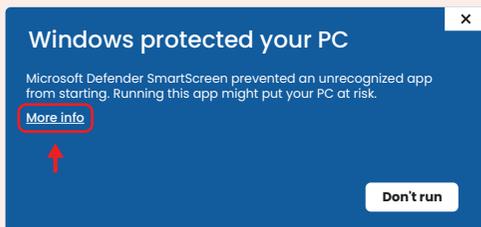

3. User Account Control (UAC)

When prompted:


Do you want to allow this app to make changes to your device?

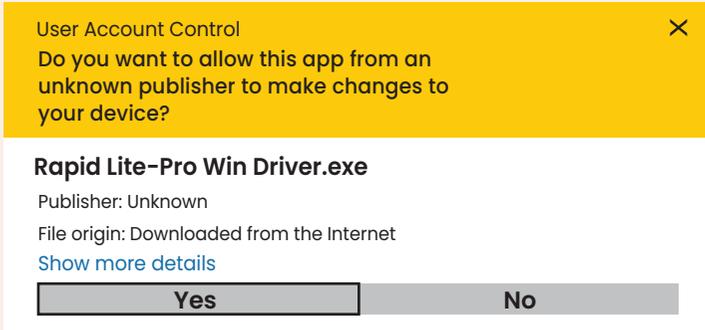

Click **Yes**


4. Start Installation

- Click Next to begin setup

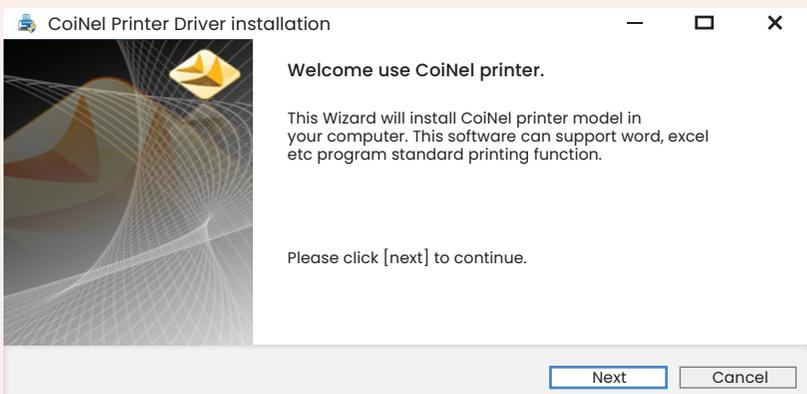

5. Installation Location


- Default installation location is recommended
- Click **Next**

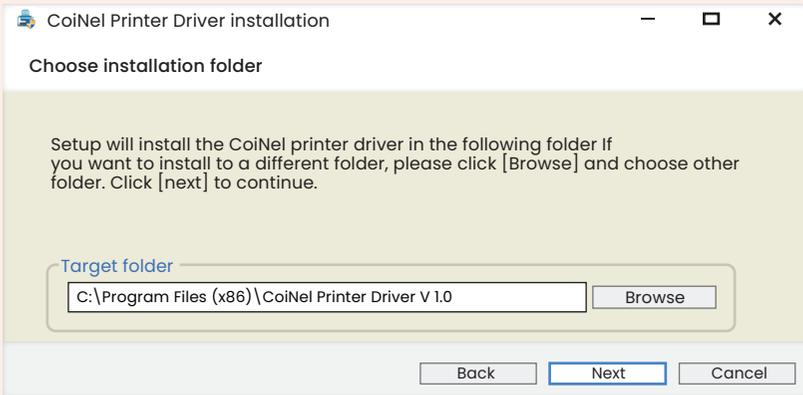

6. Verify Printer Settings


Ensure the following are selected correctly:

- Printer Model: Rapid Lite / Rapid Pro
- Printer Name: Rapid Lite / Rapid Pro
- Port: USB

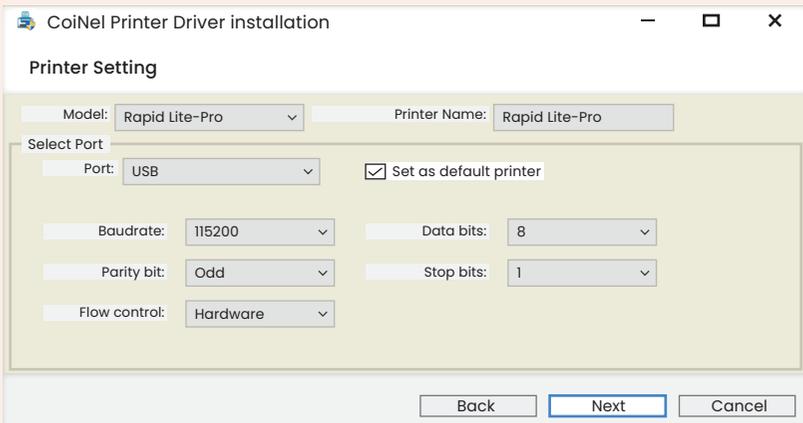


7. Installing Driver

- Installation will take **5–10 seconds**
- Do not close the window

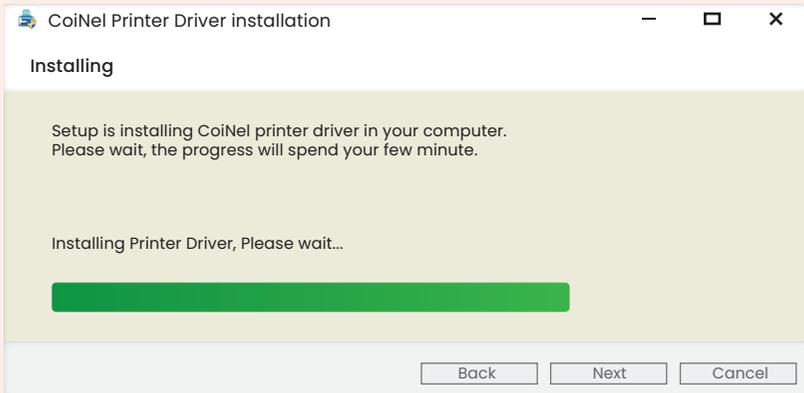

8. Finish Installation


When you see **Installation Complete**, click **Finish**

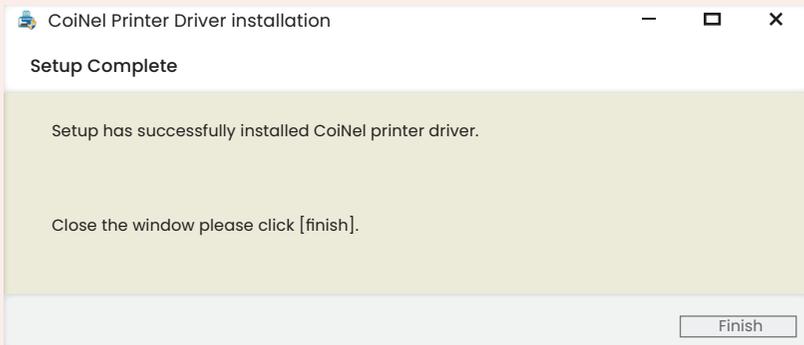

How to verify the printer Driver Are installed successfully

1. Before Installing the Driver

- Once you connect the Printer to your Machine (Computer / PC)
- Path - Control Panel\Hardware and Sound\Devices and Printers
- There you can see the Rapid Pro / Rapid Lite icon

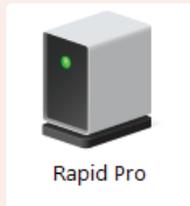

- If You are Not able to detect the Rapid Pro / Rapid Lite icon Then Check the Cable (USB Type A to USB Type B) Connection whether you are Connected Properly or not

2. After Installing the Driver you can verify

- Again, go to:
Control Panel → Hardware and Sound → Devices and Printers
- Under the **Printers** section, you should now see the installed **Rapid Lite-Pro Driver.**



3. How to Perform a Test Print

- Right-click on the Rapid Lite-Pro Driver.
- Select Printer Properties.
- Click Print Test Page.
- If the test page prints successfully, the driver installation is complete and working correctly.

Need Help?

For assistance with:

- Windows driver installation
- USB detection issues
- Test printing
- Printer configuration

Always use the latest driver version for best performance and stability.

 +91 99727 80764

 support@coineltech.com



CoiNel Technology Solutions LLP

Always use the latest driver version for best performance and stability.